

## How to install 17212 & 17213 in a M40A3


1. Remove the receiver, loading slide, outer barrel, trigger & cylinder.
2. Pull out the end cap of the cylinder and unscrew the screw




3. Mount it on the upgrade cylinder.
4. As the cylinder head on the M40A3 are a bit shorter you need to swap those 2 using the short one on the upgrade cylinder



5. Take the upgrade trigger and remove the safe lever and the four screws holding the rear brass plate.

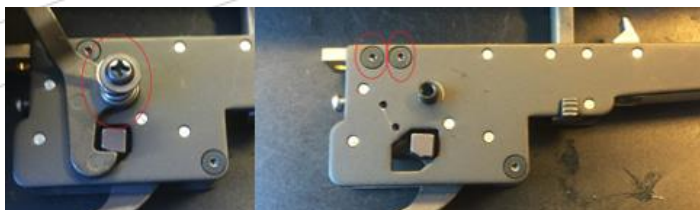

6. Mount the brass plate on to the receiver (beware of the length of the screws, use a washer if it's too long)

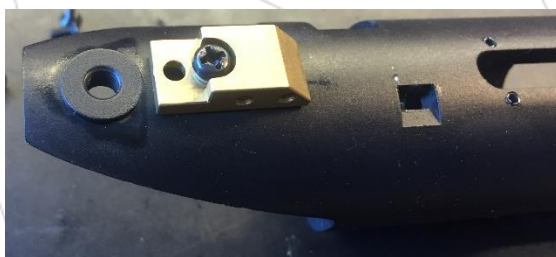

7. Mount the trigger system with the 4 screws at the rear and the one at the front.



8. Assemble rifle with the cylinder outer barrel & receiver
9. HAVE FUN

